



Disassembling Olympus Stylus 1010 Case

This guide gives instructions on how to remove the front display from the Olympus Stylus 1010.

Written By: Max McIntyre





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Case



- Unscrew the bottom and right side panel screws using a #00 screwdriver. (5 screws)

Step 2



- Remove the right side panel by pulling off the large silver piece.

Step 3



- Unscrew the remaining side and front panel screws using a #00 screwdriver. (3 screws)

Step 4




- Using your thumb and forefinger, pull off the silver name plate and silver "T-shape" piece. (2 pieces)

Step 5




- Remove the black front panel by sliding it towards the lens and then pulling it up off the camera.

Step 6

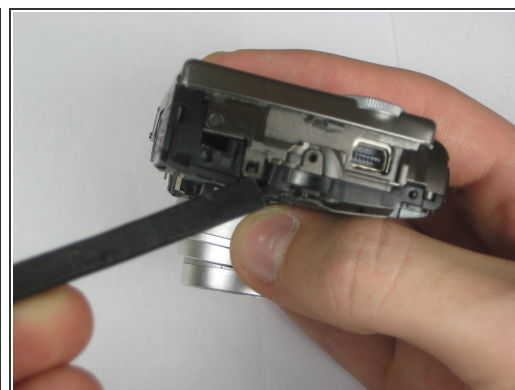

- Remove 3 screws from the front of the camera using a #00 screwdriver.
- Lift the two tabs to separate the case using a spudger. (one tab on top and one tab on the right side)

Step 7

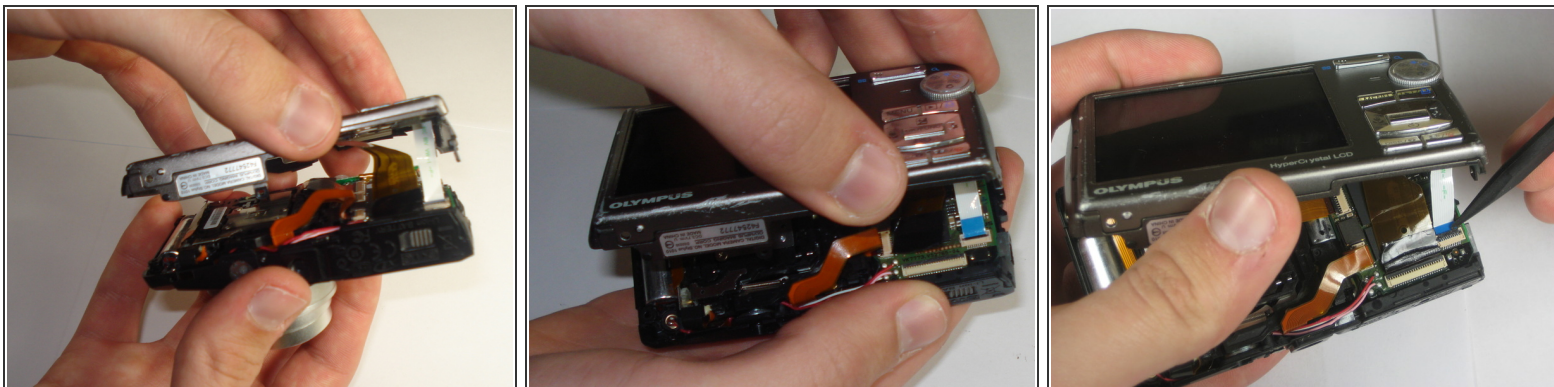

- Using a plastic spudger, lift up the black clips.
- Still using the plastic spudger, detach the gold connector strip and white connector strip.
- Using both hands, pull the camera apart into two pieces.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 01:54:55 AM.